

90mm

Front



# ET-40SPSUW

## User Manual

### Specifications

Model Name : ET-40SPSUW  
AC Input : 230 –240 VAC ~ 50Hz 10A  
Max Loading : 10A or 2400 Watt (max)  
USB Output : 5V/3.4A Total  
Dimensions : 309\*50\*30.2mm  
Weight : 314.5± 10g  
Cord Length: 0.9m

Distributed by Tempo (Aust) Pty Ltd,PO BOX 132,  
Frenchs Forest NSW 1640



1. USB-A Output
2. USB-C Output
3. AC Sockets
4. Master Switch

### Package Content

- A. Power Board x1
- B. User Manual x1
- C. Warranty Card x1



### Overload Protection

Protects connected devices from electrical overload

### Customer Service

For any questions about the product, please call our After Sales Support on 1300 886 649  
Operating hours: Monday-Friday, 8:30am-6pm;  
Saturday, 9am-6pm AEST  
For technical and warranty support, please scan the QR code or go to: [energizerpower.com.au/support](http://energizerpower.com.au/support)



### General Safety Warning

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury.  
This product complies with Australian Safety standard AS/NZS 3105 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.

© 2023 Energizer. Energizer and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries and are used under license by TennRich International Corp. All other brand names are trademarks of their respective owners. Neither TennRich International Corp. nor Energizer Brands, LLC is affiliated with the respective owners of their trademarks.

UM\_2\_ET-40SPSUW\_ML\_11

90mm

Back

### Troubleshooting

#### No power output from one of the sockets

- Try other sockets. If the other sockets have power output, it's probably the contact of one faulty socket that is loose or not connected; avoid using that socket.

#### No power output from any of the sockets

- Check that the power switch is turned on (you can try to turn it on and off a few times to make sure it's switched on)
- Make sure the input socket for the powerboard has power output.

#### No output from the USB ports

- Check that the USB cable is connected securely to the USB port and/or try a different USB port.
- The total output current for the USB ports are 3.4A. Remove devices using the other USB ports.
- Use another USB cable.

#### Powerboard is not turning on

- Check that there is no visible damage to the plug or cord.
- Ensure that the devices connected do not exceed the total maximum load (2400W, 10A). If exceeded, unplug the devices and press the overload reset button.

#### The TV cable signal is weak, or there is no signal at all

- Check the two cable connectors are firmly connected to the ANT-IN and ANT-OUT ports (located on underside of powerboard) ; you can try unplugging them and then plugging them back in; also turn the cable connector clockwise or counterclockwise to help make better contact for the connectors.
- Disconnect the cable and connect your TV directly to the wall ANT socket to make sure its not an issue with the source signal.

### IMPORTANT

- Damage: If the powerboard or cord is damaged, contact the After Sales Support line for advice. Do not attempt to open the board or replace the cord. The cord must be replaced by appropriately qualified personnel.
- Repair: If the powerboard requires repair, contact the After Sales Support line; never disassemble or modify the powerboard or attempt to service it yourself.
- Run the power supply cord in such a way that there will be no risk of anyone pulling it inadvertently or tripping over it.
- The powerboard is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a person responsible for their safety.
- Young children should be supervised to ensure they do not play with the powerboard. Close supervision is always necessary when any appliance is used by or near children.
- The product is not suitable for use in locations where children are likely to be present.
- The surge powerboard is designed for indoor use in dry places only.
- Do not exceed a maximum loading of 2400 watts.

- For safety reasons, always use earth connections.
- Only use the powerboard with the power supply cord fully unwound.
- Before installing the powerboard, make sure to place it away from: heat sources, radiators or other products that produce heat; areas with high temperatures, high humidity or direct sunlight; excess dirt and dust; open windows and any place where water may get to the unit.
- Do not immerse the cord, plug or the surge powerboard in water or other liquid, or expose the electrical connections to water or other liquid.
- Unpack the powerboard and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the powerboard needs to be transported in the future, and you can use it to store the powerboard when it is not in use.
- The powerboard should always be repacked in its original packaging whenever transporting to prevent any possible damage to the product.
- When not in use: Disconnect from the power source and store in a cool, dry and well ventilated location out of direct sunlight, and not subject to humidity.
- Warning: Discard this powerboard if the supply cord is damaged.
- Warning: The socket outlet should be located near the equipment and should be easily accessible.

#### Responsible disposal of the product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Contact your local authority for your nearest recycling centre. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

#### Responsible disposal of the packaging

The packaging of the product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

#### Cleaning the product

Only use a soft, dry cloth for cleaning the product; do not use a damp cloth. Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent or other chemicals. Wipe off any moisture, dirt or dust on the power sockets and plug pins with a clean, dry cloth.