


90mm

Front

# Energizer®

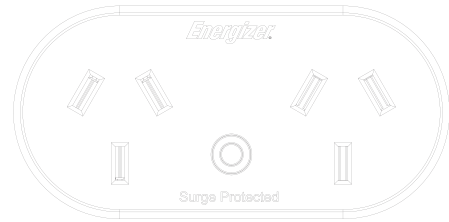


## ET-SDAW User Manual

### Specifications

Model Name : ET-SDAW  
AC Input : 230 – 240 VAC ~ 50Hz 10A  
Max Loading : 10A or 2400 Watt (max)  
Surge Protection : 175 joules with LED indicator  
Dimensions : 88\*43\*53.7mm  
Weight : 125± 10g

Distributed by Tempo (Aust) Pty Ltd, PO BOX 132,  
Frenchs Forest NSW 1640

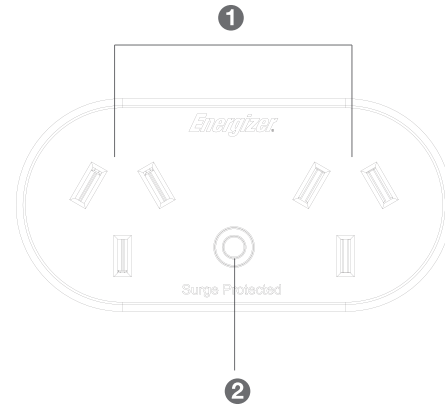

- 1. AC Sockets
- 2. Surge Protection LED Indicator

### Package Content

- A. Left Adaptor x1
- B. Right Adaptor x1
- C. User Manual x1
- D. Warranty Certificate x1



**Surge Protection**  
Protects your devices from  
damaging power surges.

### Customer Service

For any questions about the product, please call our  
After Sales Support on 1300 886 649  
Operating hours: Monday-Friday, 8:30am-6pm;  
Saturday, 9am-6pm AEST  
For technical and warranty support, please scan  
the QR code or go to: [energizerpower.com.au/support](http://energizerpower.com.au/support)



### General Safety Warning

For the safety of yourself and others, follow all instructions and take notice  
of all the warnings. When adhered to, these safety precautions can reduce  
the risk of fire, electric shock and injury.  
This product complies with Australian Safety standard AS/NZS 3105 to  
ensure the safety of the product.



The RCM is a visible indication of a product's compliance  
with all applicable ACMA regulatory arrangements,  
including all technical and record-keeping requirements.

© 2023 Energizer. Energizer and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries  
and are used under license by TennRich International Corp. All other brand names are trademarks of their respective owners.  
Neither TennRich International Corp. nor Energizer Brands, LLC is affiliated with the respective owners of their trademarks.

UM\_2\_ET-SDAW\_ML\_11

90mm

Back

### Troubleshooting

#### No power output from one of the sockets

- Try other sockets. If the other sockets have power output, it's probably  
the contact of one faulty socket that is loose or not connected; avoid  
using that socket.

#### No power output from any of the sockets

- Check that the power switch is turned on (you can try to turn it on and  
off a few times to make sure it's switched on) and that the Active Power  
LED Indicator is lit green.
- Make sure the input socket for the power Adaptor has power output.

#### Adaptor is not turning on

- Check that there is no visible damage to the plug.
- Ensure that the devices connected do not exceed the total maximum  
load (2400W, 10A).

### IMPORTANT

- Damage: If the power adaptor is damaged, contact the After Sales  
Support line for advice. Do not attempt to open the board.

- Repair: contact the After Sales Support line;  
never disassemble or modify or attempt to service it yourself.

- The power adaptor is not intended for use by persons (including children)  
with reduced physical, sensory or mental capabilities,  
or lack of experience and knowledge, unless they have been given  
supervision or instruction by a person responsible for their safety.

- Young children should be supervised to ensure they do not play with  
the power adaptor. Close supervision is always necessary when any  
appliance is used by or near children.

- The product is not suitable for use in locations where children are likely  
to be present.

- The product is designed for indoor use in dry places only.
- Do not exceed a maximum loading of 2400 watts.

- For safety reasons, always use earth connections.
- Before installing the product, make sure to place it away from:  
heat sources, radiators or other products that produce heat; areas with  
high temperatures, high humidity or direct sunlight; excess dirt and dust;  
open windows and any place where water may get to the unit.

- Do not immerse the product in water or other liquid,  
or expose the electrical connections to water or other liquid.
- Unpack and keep the original packaging carton and materials  
in a safe place. It will help prevent any damage if the product  
needs to be transported in the future, and you can use it to store  
the product when it is not in use.

- The product should always be repacked in its original packaging  
whenever transporting to prevent any possible damage to the product.
- When not in use: Disconnect from the power source and store in a cool  
dry and well ventilated location out of direct sunlight, and not subject to  
humidity.

- Warning: Discard product if damaged.
- Warning: The socket outlet should be located near the equipment and  
should be easily accessible.

#### Responsible disposal of the product

At the end of its working life, do not throw this product out with your  
household rubbish. An environmentally friendly method of disposal will  
ensure that valuable raw materials can be recycled. Contact your local  
authority for your nearest recycling centre. Electrical and electronic  
items contain materials and substances which, if handled or disposed  
of incorrectly, could potentially be hazardous to the environment and  
human health.

#### Responsible disposal of the packaging

The packaging of the product has been selected from environmentally  
friendly materials and can usually be recycled. Please ensure these are  
disposed of correctly. Plastic wrapping can be a suffocation hazard for  
babies and young children, please ensure all packaging materials are  
out of reach and are safely disposed of. Please ensure they are offered  
for recycling rather than throwing these materials away.

#### Cleaning the product

Only use a soft, dry cloth for cleaning the product; do not use a damp  
cloth. Never clean with industrial strength polish, wax, benzene, paint  
thinner, air freshener, lubricant, detergent or other chemicals. Wipe off  
any moisture, dirt or dust on the power sockets and plug pins with a  
clean, dry cloth.